



Care of your Hillbilly Camp Oven or Frypan

Thank you for purchasing a Hillbilly blue steel camp oven or frypan.

Your blue steel product will give you years of good service when you follow these care instructions after each time you use it.

Before the first use

1. Wash thoroughly with hot soapy water, rinse then dry completely.
2. Apply a light coating of cooking oil all over
3. Place over low heat for one hour or bake in a moderate oven for one hour
4. Wipe off any excess oil and the item is ready for use.

After each use use

1. Remove any excess food scraps
2. Add water to the hot frypan
3. Allow to deglaze
4. Simply empty out the water and wipe the surfaces clean with paper towel
5. Apply a light coating of cooking oil to all surfaces before storing

